



ALTERNATORS AND RECTIFIERS

Part No. ... Model ...	54021023 RM19	54021027 RM19
Rotor ...	54213901	54213901
Stator ...	47181A	47162A
Rectifier ...	49072A	49072A
Fixing nut ...	156594	156594

AMMETER

Part No. ... Model ...	36296A 2AR
Nut, terminal ...	166043
Washer, terminal ...	185040

COILS, IGNITION


Part No. ... Model ...	45110A/D MA12	45152B MA6
Grommet, rubber ...	421554	421554
Clip, cable contact ...	421863	421863
Nut, terminal ...	166043	166043
Connector, Lucar ...	54190108	54190108

CONTACT BREAKER UNITS

Part No. ... Model ...	47615A 4CA	47617A 4CA	47618A 4CA
Contact Set ...	54415803	54415803	54415803
Nut, fixing condenser angle plate ...	169194	169194	169194
Condenser ...	425377	425377	425377
Cam ...	54440029	54441729	54440029
Springs, auto advance (set of 2) ...	54415640	54413020	54413020
Weights, auto advance ...	54440031	425359	54440031
Sleeve, and action plate ...	54415749	425354	54416205

STARTING MOTOR

Part No. ... Model ...	26509A M3
Bolt, through fixing ...	54254142
Brushes, set ...	54252361
Bracket or frame, commutator ...	54254127
Bushing, bearing ...	261233
Liner, insul C.E. ...	54251728
Plate, with brushes, boxes and springs ...	54251740
Springs, set, brush tension ...	54252360
Bracket D.E. ...	54255890
Bushing, D.E. bracket ...	54255274
Armature ...	54255281
Coils, field, set ...	54251462
Sundry parts set, ...	54252417

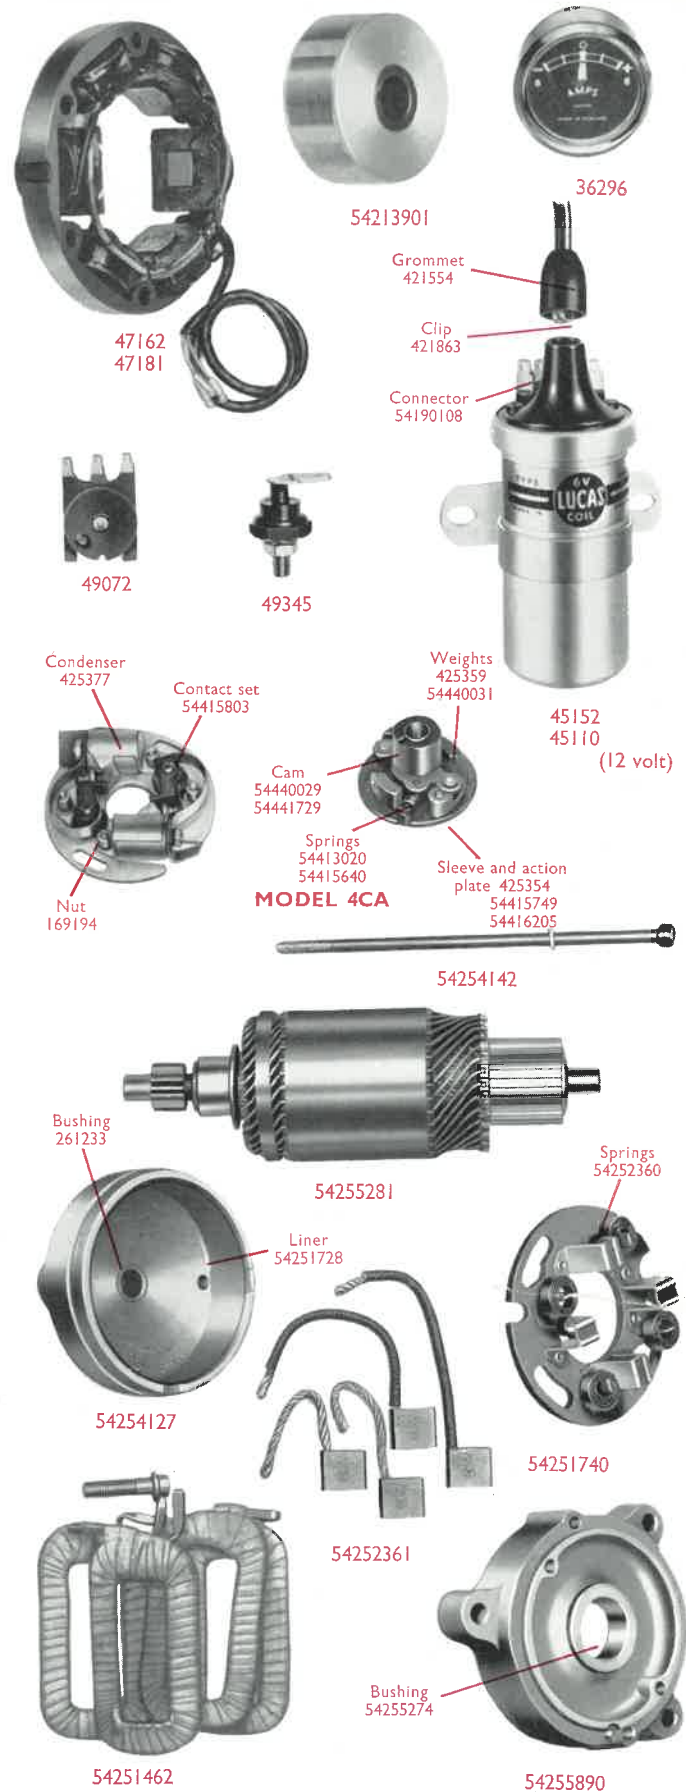

† For reference only, serviced by Rotor and Stator.